No. 968 Floor Following Power Groover

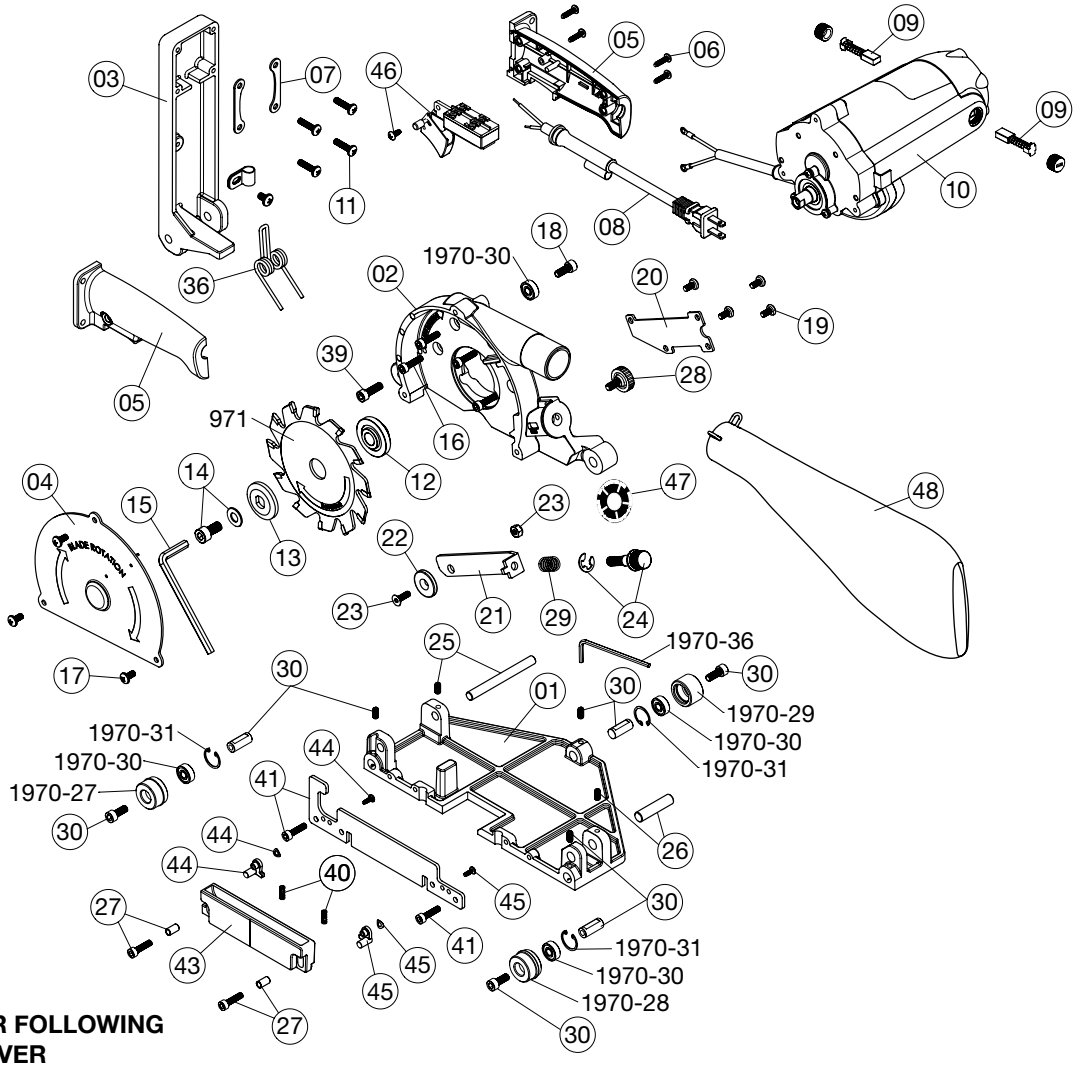

NO. 968 FLOOR FOLLOWING POWER GROOVER

Order No.	*Description*
1968-01	Groover Base
1968-02	Blade Housing
1968-03	Pivoting Arm
1968-04	Blade Cover
1968-05	Handle Set
1968-06	Handle Screws (4)
1968-07	Handle Bracket (2)
1968-08	Power Cord Set
1968-09	Brushes Set (2)
1968-10	120V Power Unit
1968-11	Handle Bracket Screws (4)
1968-12	Blade Spacer
1968-13	Blade Clamp
1968-14	Blade Screw & Washer
1968-15	Hex Wrench
1968-16	Blade Housing Screws (4)
1968-17	Blade Cover Screws (3)
1968-18	Bearing Screw
1968-19	Depth Gauge Cover Screws (4)
1968-20	Depth Gauge Cover
1968-21	Depth Gauge
1968-22	Floor Following Wheel
1968-23	Floor Following Wheel Fasteners (2)
1968-24	Depth Gauge Screw & Clip
1968-25	Pivoting Arm Pin & Lock Screw
1968-26	Blade Housing Pivot Pin & Lock Screw
1968-27	Dust Shroud Bushings & Screws (4)
1968-28	Depth Gauge Lock Screw
1968-29	Depth Gauge Spring
1968-30	Sliding Axle & Fasteners (3)
1968-36	Torsion Spring
1968-38	Groover Case Only (not shown)
1968-39	Power Unit Locking Screw
1968-40	Dust Shroud Springs (2)
1968-41	Guide Plate & Screws (3)
1968-43	Floor Following Dust Shroud
1968-44	Front Latch & Fasteners (3)
1968-45	Rear Latch & Fasteners (3)
1968-46	Switch & Screw
1968-47	Depth Adjusting Label
1968-48	Dust Collector Bag & Support
Common parts with 970:	
1970-27	Front Guide Wheel
1970-28	Rear Wheel
1970-29	Center Wheel
1970-30	Wheel Bearing
1970-31	Snap Ring
1970-36	2.5mm Hex Key Wrench

CRAIN CUTTER CO., INC.

1155 Wrigley Way • Milpitas, CA 95035-5426 • Phone: (408) 946-6100 • Fax: (408) 946-4268