

CRAIN

NO. 110 INSIDE COVE CORNER KIT



KIT CONTENTS:

This kit includes a cove template, cove scriber, and a pin vise. The cove template provides a pattern for scribing the curve of the cove seam. The cove scriber marks the felt pattern with lines for positioning the template. The pin vise is provided for scribing the template pattern on the vinyl.

INSTRUCTIONS:

1. Trim the felt net to the base of the cove stick. Use the cove scriber to scribe two lines parallel to the wall, extending outward from the corner. Where these lines meet in the corner, a cross is formed. See figure 1.
2. Align the template to match squarely with the vinyl pattern. Then, kneel facing the cross and place the back corner of the template into the scribed cross. See figure 2.
3. Use the pin vise and scribe along the template. This will form an outline for the corner and the top for a fit to the cap metal. See figure 3a. The template is made for $3\frac{3}{8}$ " standard cove height. If a higher or shorter cove is desired, simply add or subtract material as required. The scribed corner may now be cut. A beveled cut is recommended for clean-fitting corners. See figure 3b.
4. To trim to final height, use a scrap piece of vinyl and push it up into the cap metal. Use the cove scriber to mark the scrap $3\frac{3}{8}$ " from the wall, just as was done initially on the felt. See figure 4a. Align the scribe marks on the felt and vinyl, and trim any excess length from the top. See figure 4b.
5. The vinyl can now be put into place against the cove stick. Work first with the right side, making sure of a tight fit against the cove stick. Then repeat with the left side. See figure 5. Generally, one thickness may have to be removed from the vertical portion of the left side.

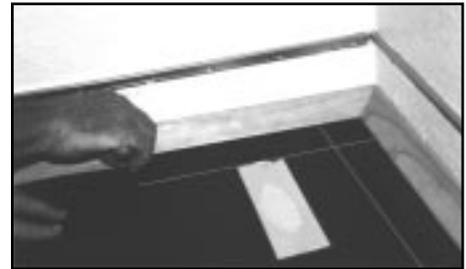


Figure 1



Figure 2

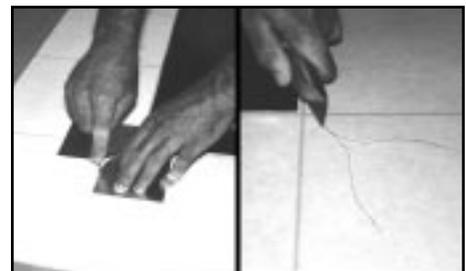


Figure 3a

Figure 3b



Figure 4a

Figure 4b



Figure 5

CRAIN CUTTER CO., INC.

MILPITAS, CA 95035

TEL: 408-946-6100 FAX: 408-946-4268